



How to change front
wheel bearing on
PEUGEOT 206 CC (2D) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

PEUGEOT 206 CC (2D) 2.0 S16, PEUGEOT 206 CC (2D) 1.6 16V, PEUGEOT 206 CC (2D) 1.6 HDi 110

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: CITROËN Berlingo / Berlingo First Van (M_) 1.9 D

REPLACEMENT: WHEEL BEARING – PEUGEOT 206 CC (2D). TOOLS YOU'LL NEED:

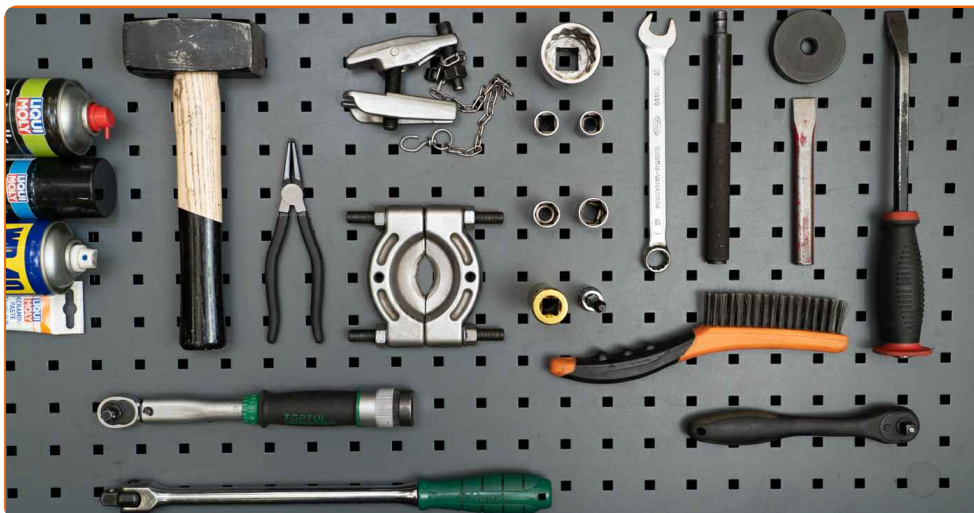

- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Brake cleaner
- Ceramic grease
- Copper grease
- Torque wrench
- Combination spanner #16
- Drive socket # 13
- Drive socket # 16
- Drive socket # 17
- Drive socket # 19
- Drive socket # 36
- Torx bit T30
- Wheel impact socket #19
- Bush and bearing driver set
- Bearing separator
- Ball joint puller
- Circlip pliers
- Ratchet wrench
- Flat chisel
- Hammer
- Tap wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

Buy tools

AUTODOC recommends:

- Do not re-use the bearing assembly of your PEUGEOT 206 CC (2D) car.
- The wheel hub bearing replacement procedure is identical for both wheels on the same axle.
- Please note: all work on the car – PEUGEOT 206 CC (2D) – should be done with the engine switched off.


CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.



2 Secure the wheels with chocks.

3 Loosen the wheel mounting bolts. Use wheel impact socket #19.

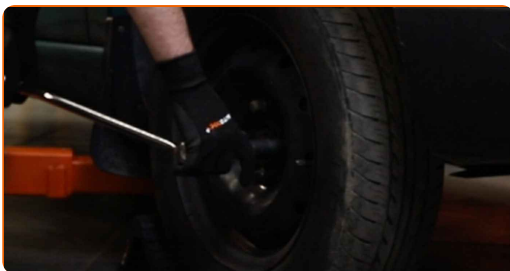

4 Raise the car.

Replacement: wheel bearing – PEUGEOT 206 CC (2D). Tip:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

5

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
PEUGEOT 206 CC (2D)

6

Remove the wheel.



7 Clean the fastener of the driveshaft. Use a wire brush. Use WD-40 spray.



8 Remove the cotter pin. Use a crowbar.




9 Remove the circlip.



10 Loosen the fastener of the driveshaft. Use a drive socket #36. Use a tap wrench.




11 Spread the brake pads. Use a crowbar.

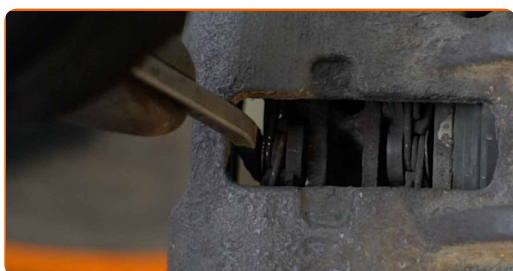


12 Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.




13 Unscrew the brake caliper bracket fasteners. Use a drive socket #19. Use a ratchet wrench.

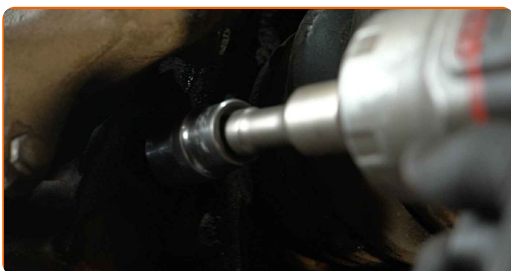

14 Remove the fastening bolts.

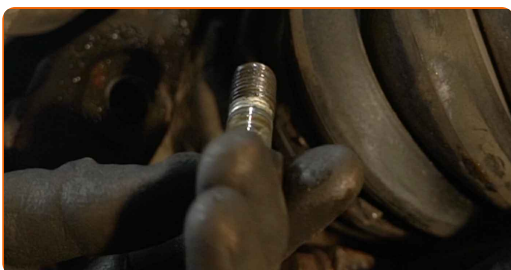

15 Remove the brake caliper together with its bracket.

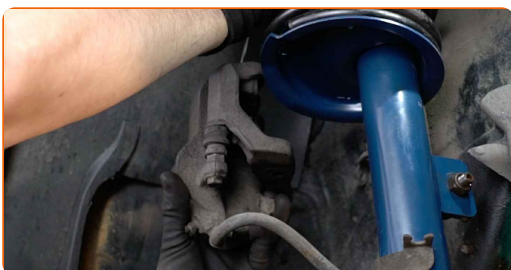

Replacement: wheel bearing – PEUGEOT 206 CC (2D). AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.


16

Clean the brake disc fasteners. Use a wire brush. Use WD-40 spray.



17

Unscrew the brake disc fasteners. Use Torx T30. Use a ratchet wrench.

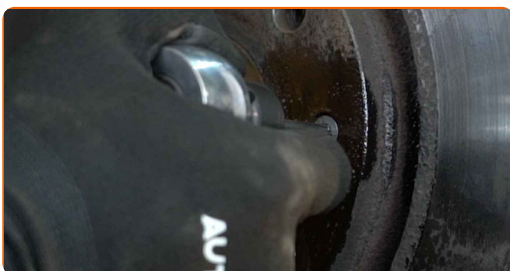

18

Remove the fastening bolts.

19 Remove the brake disc.



20 Clean the fastener that connects the brake hose bracket to the suspension strut. Use a wire brush. Use WD-40 spray.



21 Unscrew the fastener that connects the brake hose bracket to the suspension strut. Use a drive socket #13. Use a ratchet wrench.



22 Remove the brake hose bracket.



- 23** Clean the lower fastener connecting the suspension strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



- 24** Clean the fastener connecting the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.



- 25** Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.



- 26** Remove the fastening bolt.

- 27** Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.



28 Remove the fastening bolt.



29 Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.



30 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #17. Use a ratchet wrench.



31 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.



32 Prop up the steering knuckle. Use a hydraulic transmission jack.



- 33** Release the fastener that connects the control arm ball joint to the steering knuckle. Use a flat metal-working chisel. Use a hammer.



- 34** Disconnect the ball joint from the steering knuckle. Use a crowbar.



- 35** Unscrew the fastener connecting the drive shaft to the wheel hub.



- 36** Remove the fastening nut.

- 37** Remove the support from under the steering knuckle.

AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. PEUGEOT 206 CC (2D)

38 Detach the driveshaft from the steering knuckle.



AUTODOC recommends:

- Make sure that the drive shaft is not unloaded (when the car is jacked).

39 Release the lower fastener connecting the shock strut to the steering knuckle. Use a flat metal-working chisel. Use a hammer.

40 Disconnect the steering knuckle from the shock absorber strut.


41 Remove the steering knuckle together with the wheel hub.



42 Clean the wheel hub bearing retaining ring. Use a wire brush. Use WD-40 spray.



43 Remove the hub from the steering knuckle. Bush and bearing driver set.

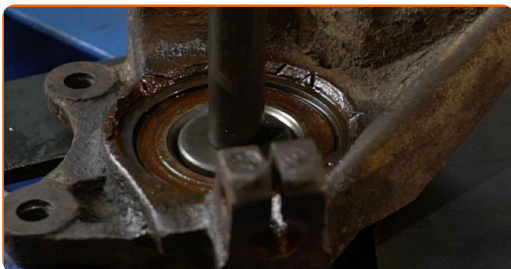

44 Remove the wheel hub bearing retaining ring. Use circlip pliers.



45 Dismantle the inner bearing race that is remaining on the hub. Bush and bearing driver set. Use a bearing separator.




46 Press out the wheel hub bearing. Bush and bearing driver set.



47

Clean the hub bearing mounting seat. Use a wire brush. Use WD-40 spray.

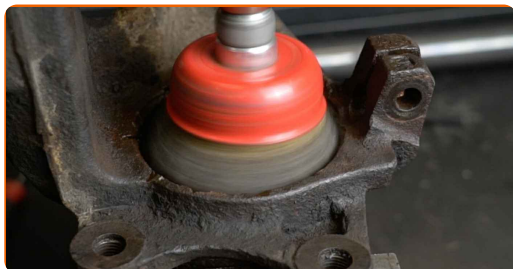

48

Press the new bearing in the steering knuckle. Bush and bearing driver set.




Replacement: wheel bearing – PEUGEOT 206 CC (2D). AUTODOC experts recommend:

- Check to make sure the wheel hub bearing is positioned correctly. Avoid its misalignment.
- Stop pressing on the surface of the bearing immediately after it has been fitted into its mounting seat.

49

Install the wheel hub bearing retaining ring. Use circlip pliers.

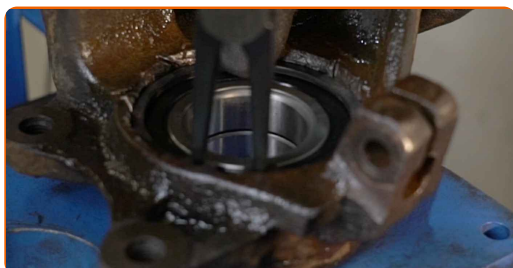

50

Clean the hub bearing mounting seat. Use a wire brush. Use WD-40 spray.



51

Install the wheel hub on the steering knuckle. Bush and bearing driver set.



Replacement: wheel bearing – PEUGEOT 206 CC (2D). AUTODOC recommends:


- Make sure that the wheel hub is positioned correctly. Avoid any misalignment.

52


Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.




53 Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.

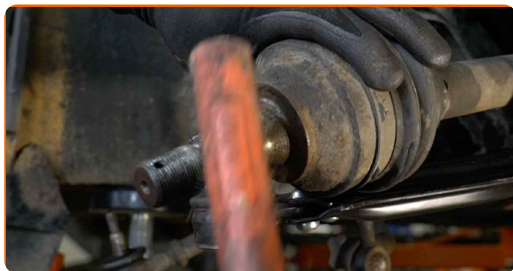

54 Clean the ball joint. Use a wire brush. Use WD-40 spray.

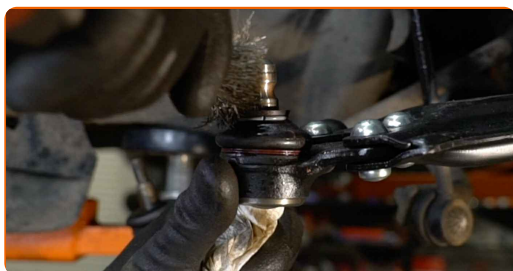

55 Clean the tie rod end. Use a wire brush. Use WD-40 spray.

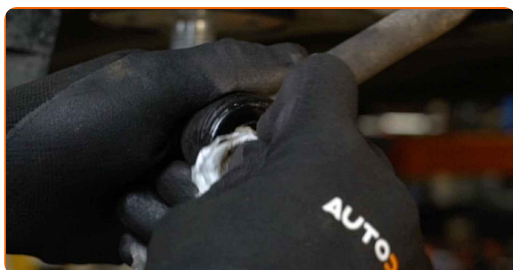

56 Install the steering knuckle assembled with the wheel hub.



57 Fix the shock absorber strut on the steering knuckle.

58 Install the fastening bolt.



59 Treat the splines of the driveshaft CV joint. Use copper grease.



60 Install the steering knuckle on the CV axle.



61 Connect the ball joint to the steering knuckle.



62 Install the fastening bolt.



- 63** Screw the fastener connecting the ball joint to the steering knuckle. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.



- 64** Screw in the fastener that connects the shock strut to the steering knuckle. Use a combination spanner #16. Use a drive socket #16. Use a ratchet wrench.




- 65** Connect the tie rod end to the steering knuckle.




- 66** Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #17. Use a torque wrench. Tighten it to 40 Nm torque.



- 67** Tighten the lower fasteners of the suspension strut. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 55 Nm torque.

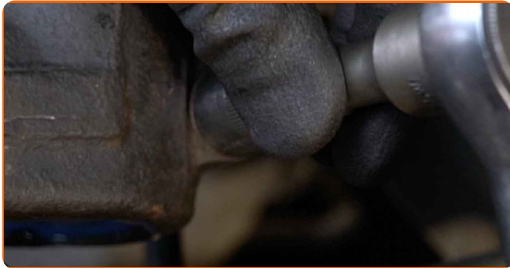


- 68** Tighten the fastener connecting the ball joint to the steering knuckle. Use a combination spanner #16. Use a drive socket #16. Use a torque wrench. Tighten it to 40 Nm torque.

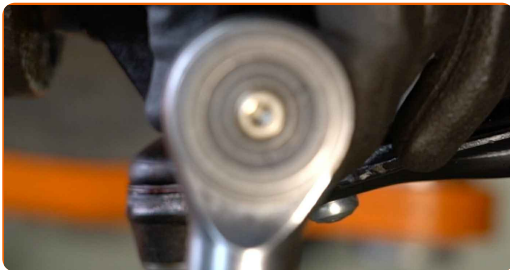


- 69** Install the fastening nut.



- 70** Screw the nut of the drive shaft. Use a drive socket #36. Use a ratchet wrench.

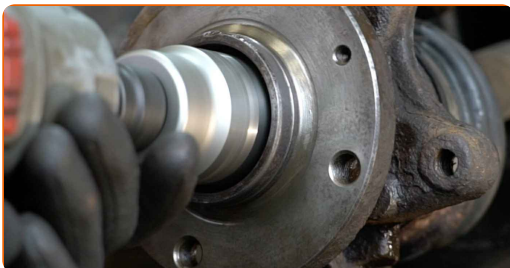

71 Clean the wheel hub. Use a wire brush. Use all-purpose cleaning spray.

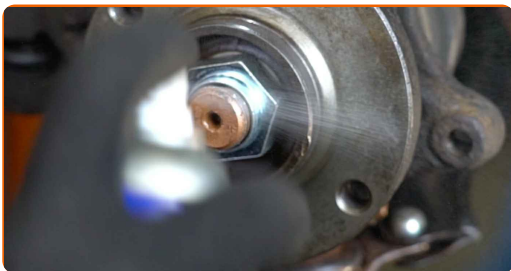

72 Treat the contacting surface. Use ceramic grease.

73 Install the brake disc.



74 Install the fastening bolts.



75 Tighten the brake disc fasteners. Use Torx T30. Use a torque wrench. Tighten it to 10 Nm torque.



76 Install the brake caliper together with its bracket.



77 Install the fastening bolts.



78 Tighten the brake caliper bracket fasteners. Use a drive socket #19. Use a torque wrench. Tighten it to 105 nm torque.




79 Install the brake hose bracket.



80 Tighten the brake hose fastening bracket to the shock strut. Use a drive socket #13. Use a torque wrench. Tighten it to 12 nm torque.




81 Tighten the drive shaft nut. Use a drive socket #36. Use a torque wrench. Tighten it to 320 Nm torque.

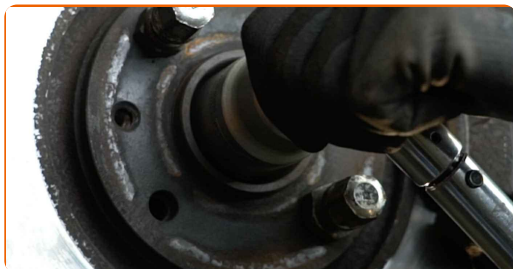

82 Restake the fastener of the driveshaft. Use a flat metal-working chisel. Use a hammer.



83 Treat the fastener that connects the suspension strut to the steering knuckle. Treat the ball joint fastener. Treat the fastener connecting the tie rod end to the steering knuckle. Use copper grease.

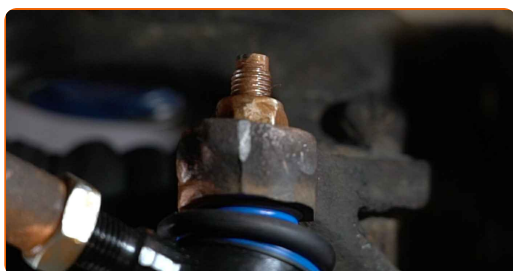

84 Clean the wheel rim mounting seat. Use a wire brush.

85 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



86

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: wheel bearing – PEUGEOT 206 CC (2D). After applying the spray, wait a few minutes.

87

Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. PEUGEOT 206 CC (2D)

88


Screw in the wheel bolts. Use wheel impact socket #19.

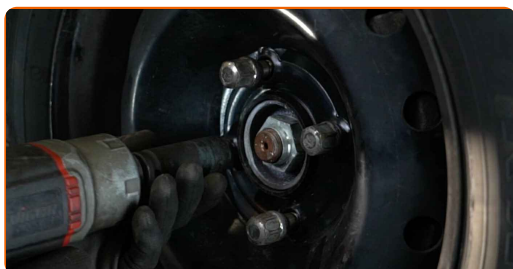

- 89** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 90 Nm torque.



- 90** Remove the jacks and chocks.

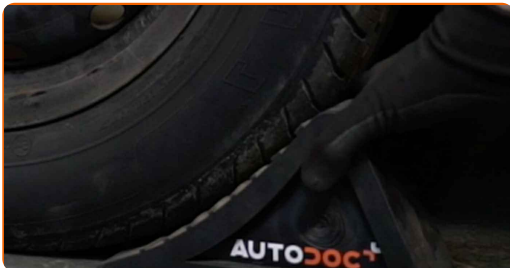

Replacement: wheel bearing – PEUGEOT 206 CC (2D). Professionals recommend:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Check the brake fluid level in the expansion tank and refill if necessary.

91

Tighten the brake fluid reservoir cap. Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

WHEEL BEARING: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.