



How to change glow
plugs on **PEUGEOT 305 I**
Estate – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

PEUGEOT 305 I Estate 1.5 Diesel

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: CITROËN Berlingo / Berlingo First Van (M_) 1.9 D

**REPLACEMENT: GLOW PLUGS – PEUGEOT 305 I
ESTATE. TOOLS YOU NEED:**



- High-temperature ceramic grease
- Torque wrench
- Combination spanner #10
- Drive socket # 7
- Drive socket # 8
- Spark plug socket # 12
- Ratchet wrench
- Telescoping magnet
- Long nose pliers
- Microfibre towel
- Fender cover

Buy tools

Replacement: glow plugs – PEUGEOT 305 I Estate. AUTODOC experts recommend:

- The replacement procedure is identical for all glow plugs.
- Please note: all work on the car – PEUGEOT 305 I Estate – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Before getting down to work, start the engine and let it warm up to operating temperature.

4 Shut off the engine.

5 Unscrew the negative battery terminal fastener. Use a combination spanner #10.



6 Disconnect the earth cable terminal from the battery.



7 Loosen the air hose clamps. Use a drive socket #7. Use a ratchet wrench.



8 Remove the air duct.



9 Cover the intake manifold inlet with a towel.



10 Unscrew the fasteners that connect the power cables to the glow plugs. Use a drive socket #8. Use a ratchet wrench.



11 Remove the fastening nuts. Use a telescoping magnet.



12 Remove the power cable. Use long nose pliers.



13 Clean the glow plug mounting seats.



14 Unscrew the glow plugs. Use the spark plug socket #12. Use a torque wrench.



Replacement: glow plugs – PEUGEOT 305 I Estate. Tip from AUTODOC experts:

- The glow plugs can get stuck over time and break apart when removed.
- Use a torque wrench to loosen the parts to avoid exceeding the breakaway torque specified by the car manufacturer.
- If you have reached the breakaway torque but the glow plugs still won't unscrew, you need to consult a professional: breakage of the parts can result in costly engine repairs.

15 Remove the glow plugs. Use long nose pliers.



16 Treat the glow plugs. Use high-temperature ceramic grease.



17 Install new glow plugs to their mounting seats. Use long nose pliers.



18 Tighten the glow plugs. Use the spark plug socket #12. Use a torque wrench. Tighten it to 25 nm torque.



Replacement: glow plugs – PEUGEOT 305 I Estate. Tip:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

19

Install the power cable.



20

Install the fastening nuts.



21

Tighten the fasteners that connect the power cables to the glow plugs. Use a drive socket #8. Use a torque wrench. Tighten it to 8 nm torque.




22 Remove the towel from the intake manifold inlet.



23 Install the air duct.



24 Screw in the air hose clamps. Use a drive socket #7. Use a ratchet wrench.

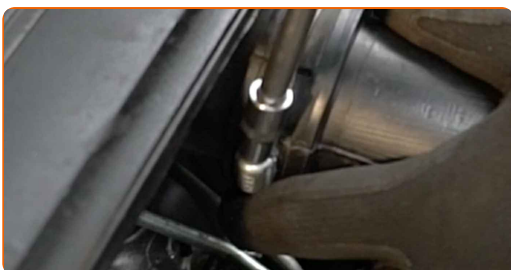

25 Connect the earth cable terminal to the battery.



26 Screw in the negative battery terminal fastener. Use a combination spanner #10.



27 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

28 Shut off the engine.

29 Remove the fender protection cover.

30 Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

GLOW PLUGS: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.