- AUTODOC CLUB

How to change engine oil and filter on **PEUGEOT 406 Coupe** – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: PEUGEOT 406 Coupe 2.0 16V, PEUGEOT 406 Coupe 3.0 V6, PEUGEOT 406 Coupe 2.2 HDI, PEUGEOT 406 Coupe 2.2

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 406 Saloon 2.2

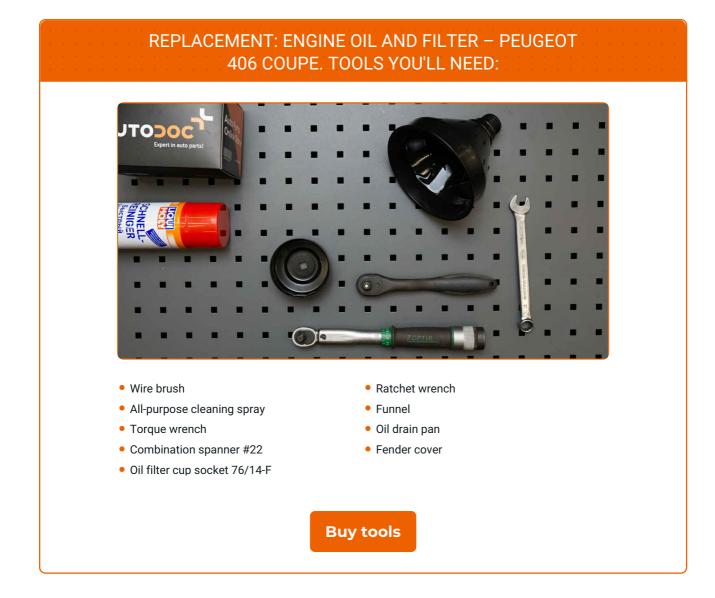

3


O



Replacement: engine oil and filter - PEUGEOT 406 Coupe. AUTODOC experts recommend:

- Replace the oil filter every time when changing motor oil.
- Wear gloves to prevent contact with hot liquid.
- All work should be done with the engine stopped.

REPLACEMENT: ENGINE OIL AND FILTER – PEUGEOT 406 COUPE. USE THE FOLLOWING PROCEDURE:

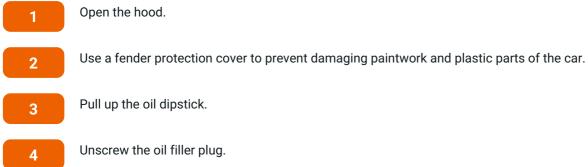

Unscrew the oil filler plug.





Lift the car using a jack or place it over an inspection pit.



AUTODOC recommends:

- The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.
- 6

Clean the area of the oil pan drainage hole. Use a wire brush. Use all-purpose cleaning spray.



7

Put a waste oil container with at least 5 l capacity under the drainage hole.



8

Unscrew the drain plug. Use a combination spanner #22.




9

Drain the used oil.



+ AUTODOC CLUB

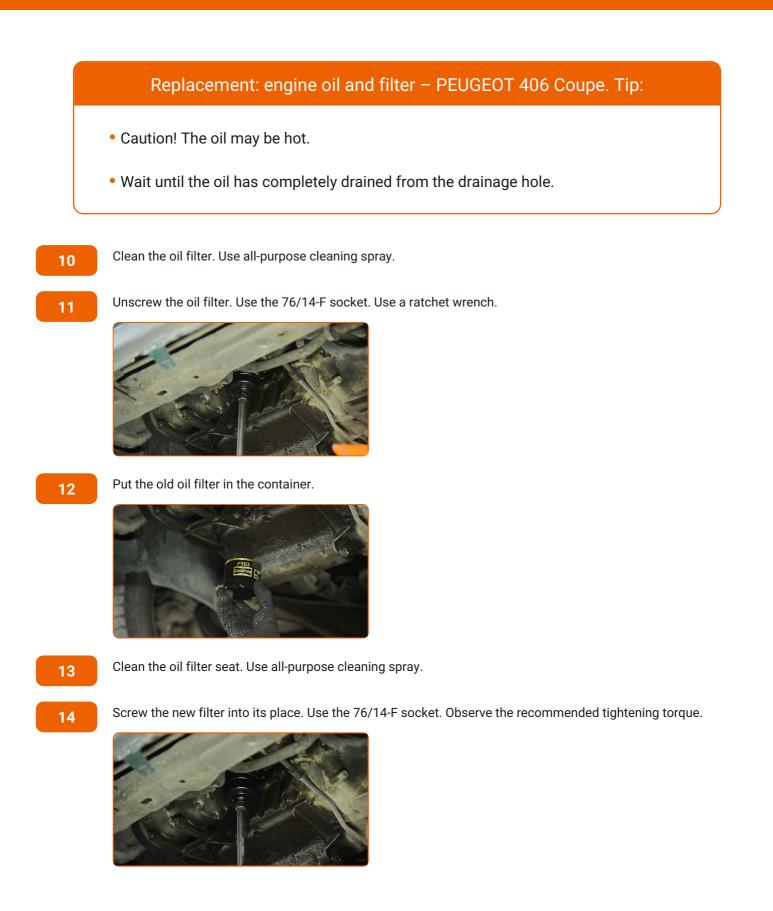

တြ

+ AUTODOC CLUB



15

Clean the area of the oil pan drainage hole.




16

Screw in the new drainage plug and tighten it. Use a combination spanner #22. Use a torque wrench. Tighten it to 30 nm torque.



17

Clean the area of the oil pan drainage hole. Use all-purpose cleaning spray.

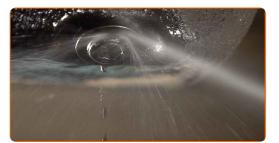

18

Lower the car.

19

Remove the oil filler cap.



20

Insert the funnel.



21

Pour new oil into the engine in the amount recommended by the car manufacturer.



Replacement: engine oil and filter – PEUGEOT 406 Coupe. Tip from AUTODOC experts:

• Use the oil recommended by the manufacturer.

22

Check the oil level using the dipstick. Top up oil if necessary.



Please note!

• The oil level should be between the Min and Max marks.



Install the oil filler cap.



Tighten the oil filler cap.





Run the engine for a few minutes. After the oil pressure warning light goes out, stop the engine.

26

Check the oil level 5 minutes after the stop of the engine operation using a dipstick and add oil if necessary.



Please note!

- The oil level should be between the Min and Max marks.
- Make sure that the oil filler cap is properly tightened.
- Check the threaded plug of the drainage hole and the oil filter seal for tightness. If necessary, carefully tighten them up.
- 27

28

Remove the fender protection cover.

Close the hood.



Replacement: engine oil and filter – PEUGEOT 406 Coupe. Tip from AUTODOC:

- Note that oil pressure warning light, which indicates insufficient pressure in the lubrication system, may be on for a longer time than usual. After a few seconds, the oil will fill all the channels, and the light will go out.
- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

OIL FILTER: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.