



How to change rear  
brake discs on **Toyota**  
**RAV4 II** – replacement  
guide

## VIDEO TUTORIAL




### Important!

This replacement procedure can be used for:

TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 1.8 (ZCA25\_, ZCA26\_), TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.0 D 4WD (CLA20\_, CLA21\_), TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.4 4WD

The steps may slightly vary depending on the car design.

REPLACEMENT: BRAKE DISCS – TOYOTA RAV4 II.  
TOOLS YOU'LL NEED:

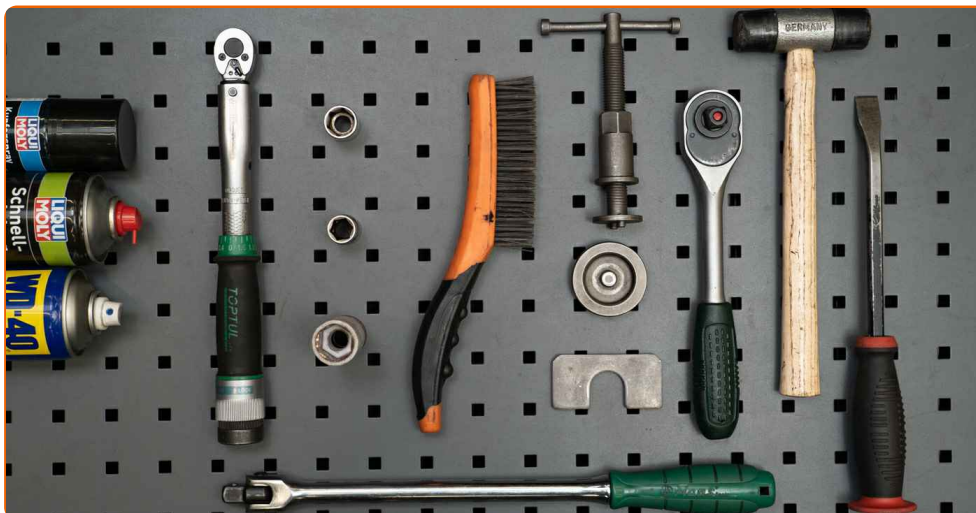

- Wire brush
- Nylon cleaning brush
- WD-40 spray
- All-purpose cleaning spray
- Brake cleaner
- Anti-squeal paste
- Ceramic grease
- Torque wrench
- Drive socket # 14
- Wheel impact socket #19
- Ratchet wrench
- Brake caliper wind back tool
- Flat screwdriver
- Crow bar
- Hammer
- Pin punch
- Wheel chock

**BUY TOOLS**

**AUTODOC recommends:**

- Replace the brake disks on the car Toyota RAV4 II in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car – Toyota RAV4 II – should be done with the engine switched off.


**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**

**1** Open the bonnet. Unscrew the brake fluid reservoir cap.



**2** Secure the wheels with chocks.

**3** Loosen the wheel mounting bolts. Use wheel impact socket #19.

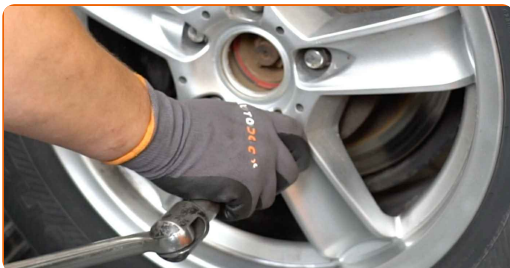


**4** Raise the car.



**Replacement: brake discs – Toyota RAV4 II. Tip from AUTODOC:**

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

**5** Unscrew the wheel bolts.

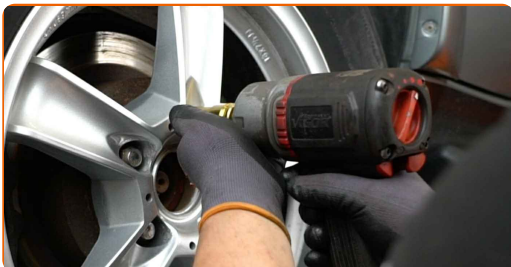


**AUTODOC recommends:**

- **Warning!** To avoid injury, hold the wheel while unscrewing the fastening bolts.  
Toyota RAV4 II


**6** Remove the wheel.




**7** Detach the brake caliper retaining spring. Use a crowbar.

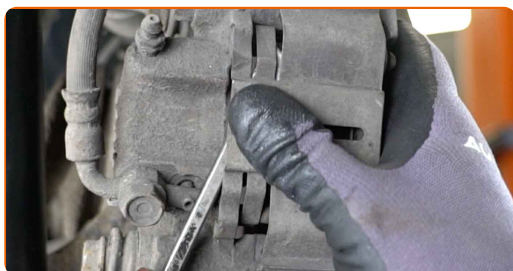

**8** Remove the retaining springs of the brake pads. Use a flat screwdriver.

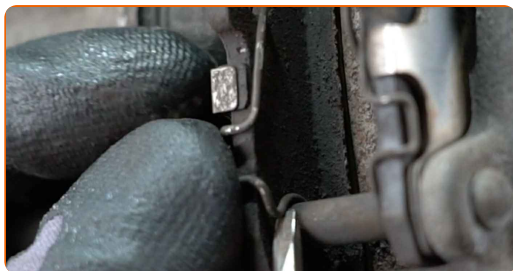

**9** Clean the brake pad guide pins. Use a wire brush. Use a brake cleaner.

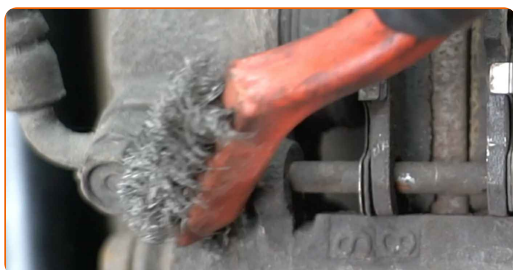


**AUTODOC recommends:**

- After applying the spray, wait a few minutes.

**10** Remove the brake pad guide pins. Use a pin punch. Use a hammer.




**11** Remove the brake pads.

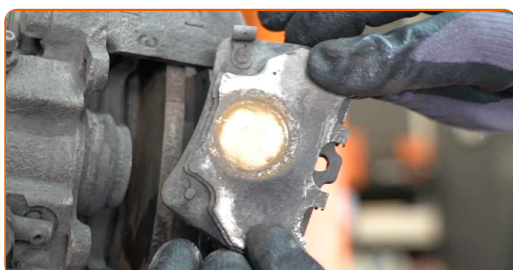

**12** Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.




**13** Unscrew the brake caliper fasteners. Use a drive socket #14. Use a ratchet wrench.

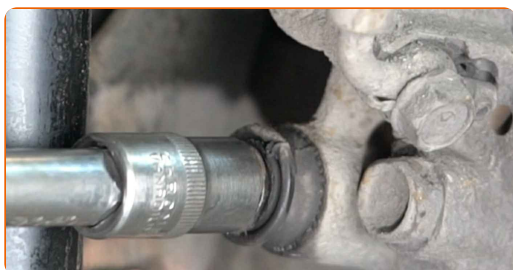



**14**

Remove the brake caliper.

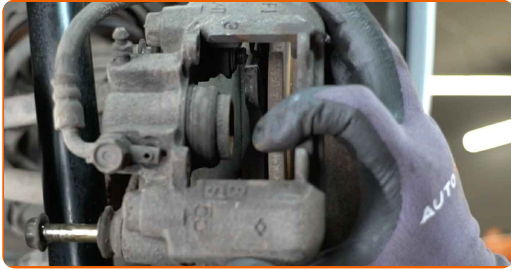


**Replacement: brake discs – Toyota RAV4 II. AUTODOC experts recommend:**

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

**15**

Remove the rubber plug. Use a crowbar.

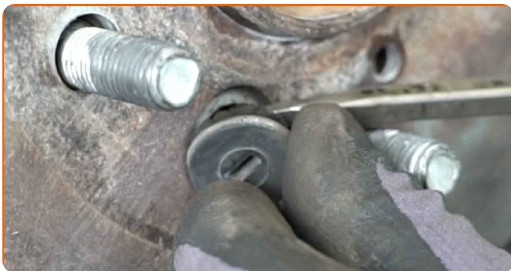

**16**

Release the parking brake adjuster. Use a flat screwdriver.





**17** Remove the brake disc.



**18** Clean the hub. Use a wire brush. Use all-purpose cleaning spray.

**19** Treat the contacting surface. Use ceramic grease.




**20** Install the brake disc.




**21** Set the parking brake adjuster in the correct position. Use a flat screwdriver.



**22** Install the rubber plug. Use a crowbar.

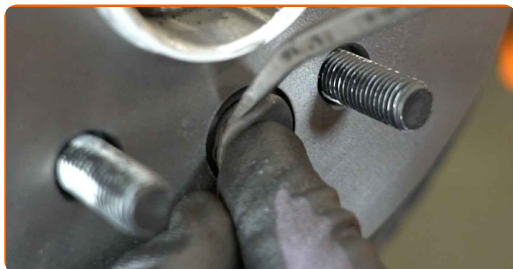

**23** Treat the brake caliper pistons. Use a nylon cleaning brush. Use a brake cleaner.

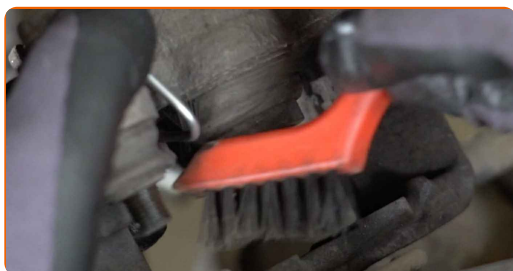


**AUTODOC recommends:**

- Replacement: brake discs – Toyota RAV4 II. After applying the spray, wait a few minutes.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.


**24** Wind back the brake caliper pistons. Use brake caliper wind back tool.



**25** Install the brake caliper and fix it.

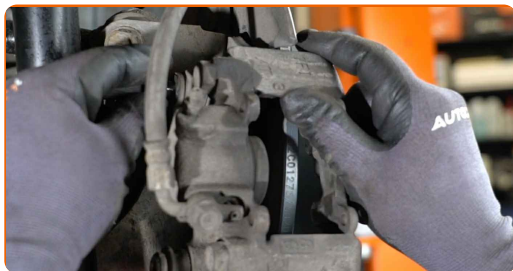

**26** Tighten the brake caliper fasteners. Use a drive socket #14. Use a torque wrench. Tighten it to 44 Nm torque.

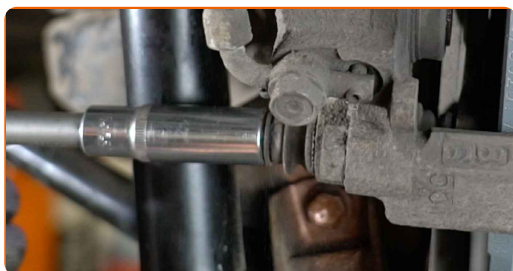


**27** Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.




**AUTODOC recommends:**

- Make sure the disc surface is clean before installing the pads.


**28** Install the brake pads.

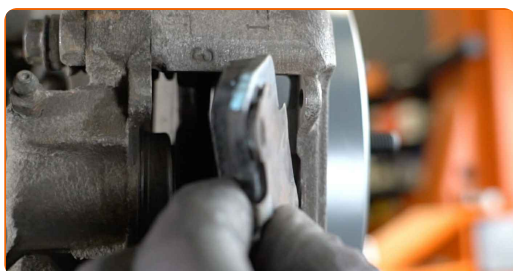

29 Install the brake pad guide pins.

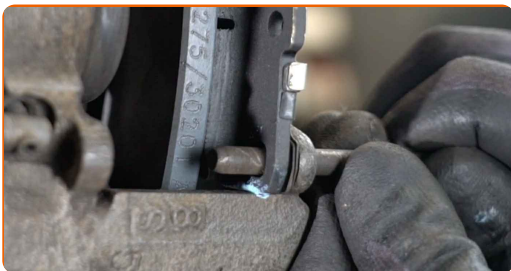


30 Install the retaining springs of the brake pads. Use a flat screwdriver.

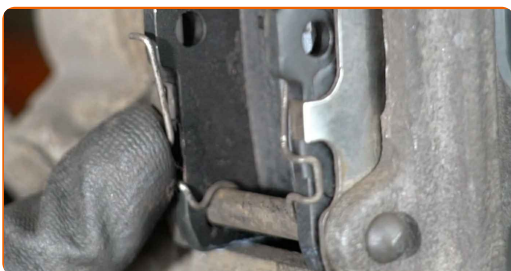

31 Install the brake caliper retaining spring.



32 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.

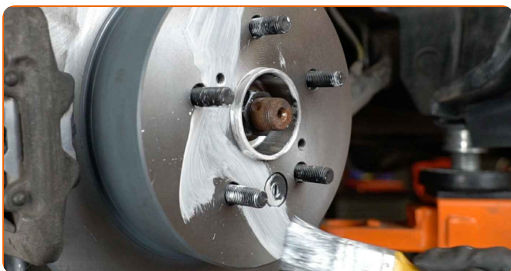

33 Clean the brake disc surface. Use a brake cleaner.



**AUTODOC recommends:**

- After applying the spray, wait a few minutes.

**34**

Install the wheel.




**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Toyota RAV4 II

**35**

Screw in the wheel bolts. Use wheel impact socket #19.

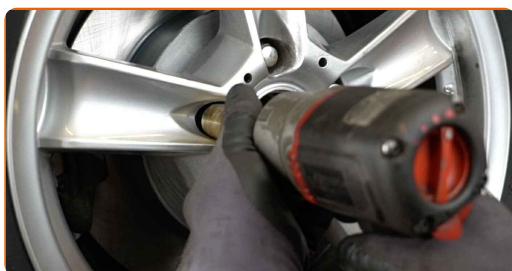

**36**

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 103 Nm torque.



37

Remove the jacks and chocks.




Replacement: brake discs – Toyota RAV4 II. AUTODOC recommends:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Check the brake fluid level in the expansion tank and refill if necessary.

38

Tighten the brake fluid reservoir cap. Close the hood.

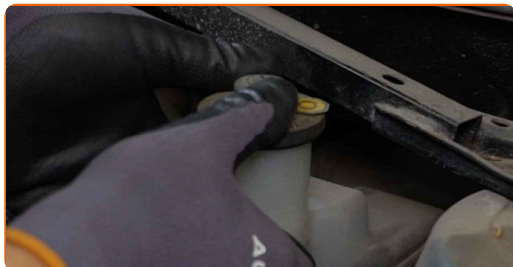

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)



# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR TOYOTA**

**BRAKE DISCS: A WIDE SELECTION**



**CHOOSE CAR PARTS FOR TOYOTA RAV4 II**

**BRAKE DISCS FOR TOYOTA: BUY NOW**

**BRAKE DISCS FOR TOYOTA RAV4 II: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.