




How to change rear
wheel bearing on
**RENAULT MODUS /
GRAND MODUS (F/JPO_)**
– replacement guide

SIMILAR VIDEO TUTORIAL

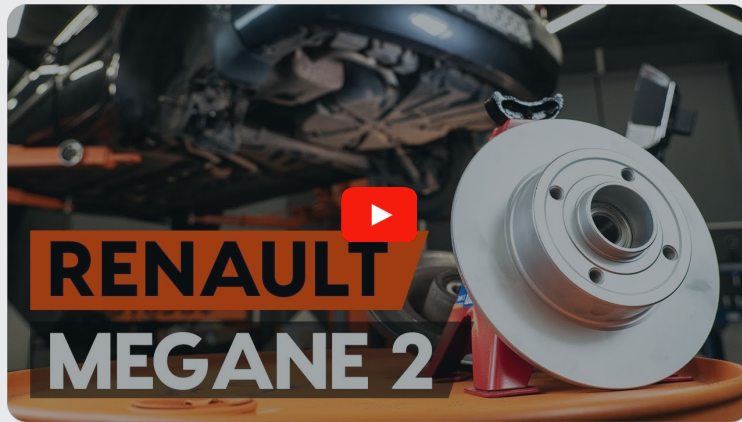

This video shows the replacement procedure of a similar car part on another vehicle

ⓘ Important!

This replacement procedure can be used for:

RENAULT MODUS / GRAND MODUS (F/JP0_) 1.5 dCi 75, RENAULT MODUS / GRAND MODUS (F/JP0_) 1.5 dCi 90, RENAULT MODUS / GRAND MODUS (F/JP0_) 1.2, RENAULT MODUS / GRAND MODUS (F/JP0_) 1.6, RENAULT MODUS / GRAND MODUS (F/JP0_) 1.5 dCi, RENAULT MODUS / GRAND MODUS (F/JP0_) 1.4, RENAULT MODUS / GRAND MODUS (F/JP0_) 1.2 16V, RENAULT MODUS / GRAND MODUS (F/JP0_) 1.2 16V Hi-Flex, RENAULT MODUS / GRAND MODUS (F/JP0_) 1.2 GPL (JP0R)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT MEGANE II Saloon (LM0/1_) 1.4

REPLACEMENT: WHEEL BEARING – RENAULT MODUS / GRAND MODUS (F/JP0_). TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Multipurpose grease
- Copper grease
- Combination spanner №15
- Drive socket # 13
- Drive socket # E16
- Drive socket # 30
- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Tap wrench
- Hammer
- Rubber mallet
- Crow bar
- Wheel chock

Buy tools

Replacement: wheel bearing – RENAULT MODUS / GRAND MODUS (F/JP0_).
AUTODOC experts recommend:

- Do not re-use the bearing assembly of your RENAULT MODUS / GRAND MODUS (F/JP0_) car.
- The wheel hub bearing replacement procedure is identical for both wheels on the same axle.
- All work should be done with the engine stopped.


REPLACEMENT: WHEEL BEARING – RENAULT MODUS / GRAND MODUS (F/JP0_). RECOMMENDED SEQUENCE OF STEPS:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

2 Secure the wheels with chocks.




3 Loosen the wheel mounting bolts. Use wheel impact socket #19.

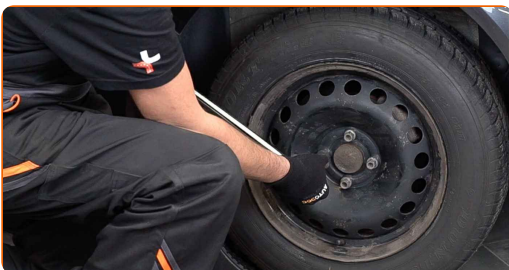

4 Raise the rear of the car and secure on supports.


5 Unscrew the wheel bolts.

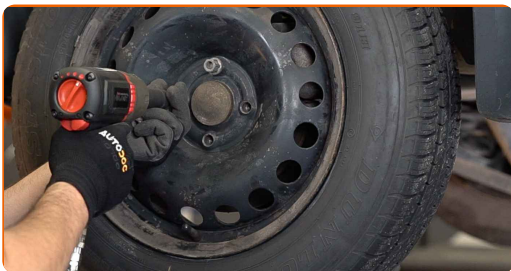


AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. RENAULT MODUS / GRAND MODUS (F/JP0_)

6 Remove the wheel.

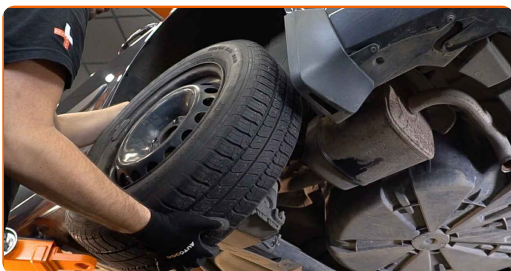


7 Spread the brake pads. Use a crowbar.

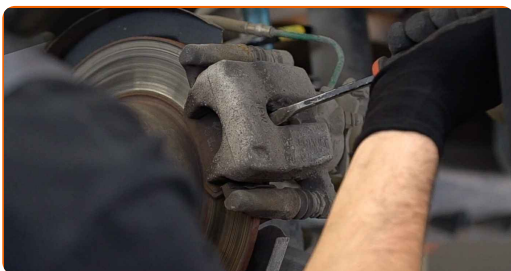

8 Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



- 9** Unscrew the brake caliper fastening. Use a combination spanner #15. Use a drive socket #13. Use a ratchet wrench.

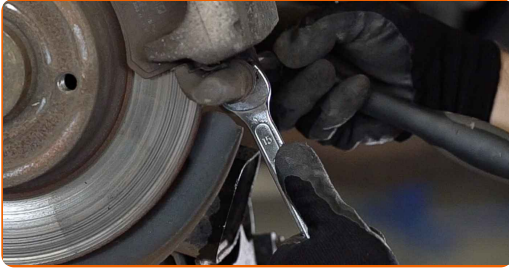

- 10** Remove the brake caliper.




Replacement: wheel bearing – RENAULT MODUS / GRAND MODUS (F/JPO_).
AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

11 Remove the brake pads. Use a crowbar.



12 Clean the brake caliper bracket fasteners. Use WD-40 spray.

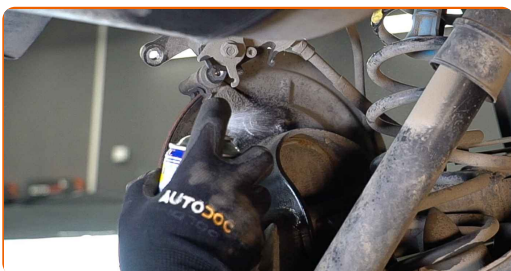

13 Unscrew the caliper bracket fastening. Use a drive socket #E16. Use a tap wrench.



14 Remove the caliper bracket.



15 Pry up and remove the wheel hub cap. Use a crowbar. Use a hammer.



16 Unscrew the hub lock nut. Use a drive socket #30. Use a tap wrench.



17 Remove the brake disc assembled with the wheel hub bearing.



18 Install the brake disc assembled with the wheel hub bearing.



19 Screw the wheel hub lock nut. Use a drive socket #30. Use a torque wrench. Tighten it to 175 Nm torque.



20 Treat the hub where it contacts the brake disk. Use a multipurpose grease.



21 Install the cap of the hub nut. Use a rubber mallet.



Replacement: wheel bearing – RENAULT MODUS / GRAND MODUS (F/JP0_).

Tip:

- The cap must always be replaced. When you install the previously used cap the sealing will be lost.

22

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

- Replacement: wheel bearing – RENAULT MODUS / GRAND MODUS (F/JP0_).
After applying the spray, wait a few minutes.

23

Install the brake caliper bracket.




24

Tighten the brake caliper bracket. Use a drive socket #E16. Use a torque wrench. Tighten it to 105 Nm torque.




25 Press in the brake caliper piston. Use brake caliper wind back tool.

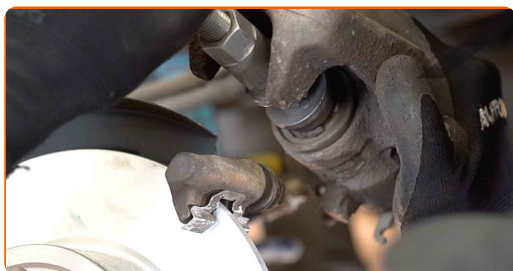

26 Install the brake pads.



27 Install the brake caliper and fix it. Use a combination spanner #15. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.

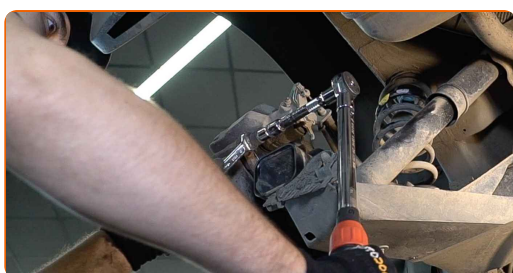


Replacement: wheel bearing – RENAULT MODUS / GRAND MODUS (F/JP0_).
Tip from AUTODOC:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.


28

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

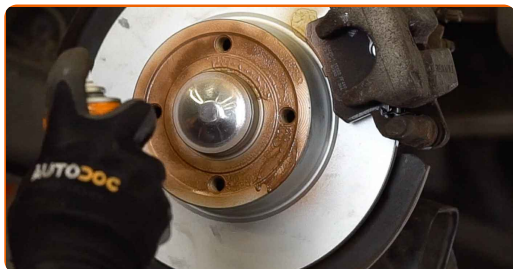

29

Clean the brake disk surface. Use a wire brush. Use a brake cleaner.

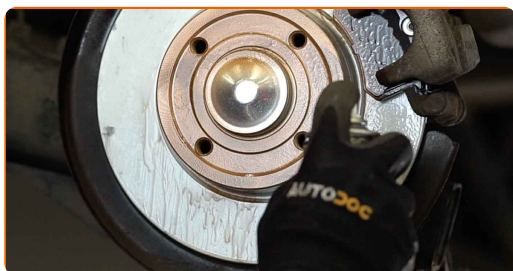


Replacement: wheel bearing – RENAULT MODUS / GRAND MODUS (F/JP0_).
Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

30

Install the wheel.

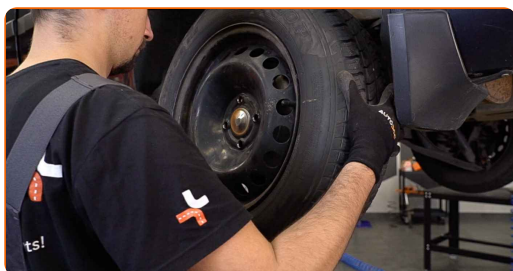


AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. RENAULT MODUS / GRAND MODUS (F/JP0_)

31 Screw in the wheel bolts. Use wheel impact socket #19.



32 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 110 Nm torque.

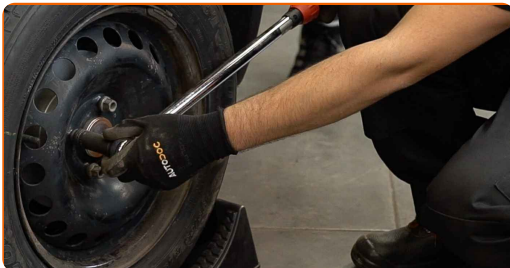

33 Remove the jacks and chocks.



AUTODOC recommends:

- Check the brake fluid level in the expansion tank and refill if necessary.

34 Tighten the brake fluid reservoir cap. Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

WHEEL BEARING: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.