



How to change lambda
sensor on **TOYOTA MR 2**
III (ZZW3_) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:
TOYOTA MR 2 III (ZZW3_) 1.8 16V VT-i

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: TOYOTA Yaris Hatchback (_P1_) 1.3 (NCP10_, SCP12_)

REPLACEMENT: LAMBDA SENSOR – TOYOTA MR 2 III (ZZW3_). TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- High-temperature ceramic grease
- Electronic spray
- Torque wrench
- Combination spanner #22
- 22-mm oxygen sensor socket
- Ratchet wrench
- Thread tap
- Flat Screwdriver
- Long nose pliers

Buy tools


Replacement: lambda sensor – TOYOTA MR 2 III (ZZW3_). AUTODOC experts recommend:

- After replacing the oxygen sensor, clear the trouble code from the electronic control unit and let the ECU adapt itself to the new sensor.
- Before getting down to work, start the engine and let it warm up to operating temperature.
- Please note: all work on the car – TOYOTA MR 2 III (ZZW3_) – should be done with the engine switched off.


CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Raise the front of the car and secure on supports.

2 Detach the oxygen sensor connector. Use a flat screwdriver. Use long nose pliers.

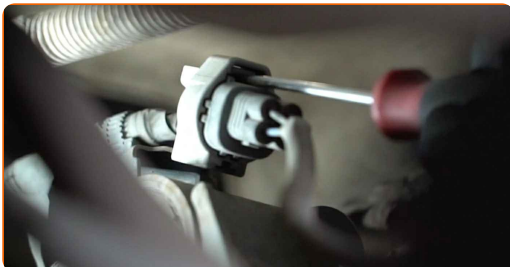


3 Clean the oxygen sensor fastener. Use a wire brush. Use WD-40 spray.

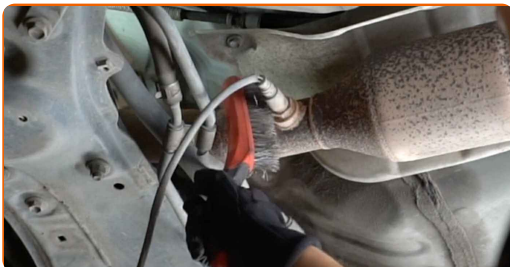


4

Unscrew the oxygen sensor fastener. Use a 22-mm oxygen sensor socket. Use a ratchet wrench.

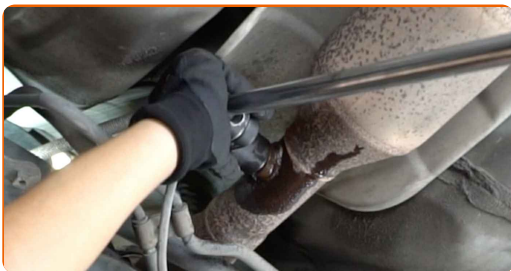


5

Clean the oxygen sensor mounting seat. Use WD-40 spray.

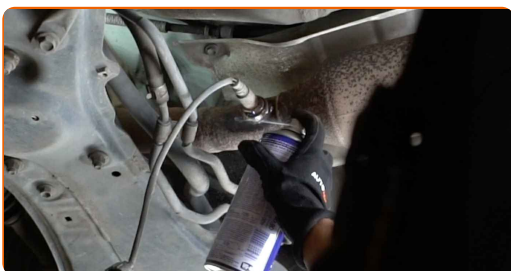

6

Remove the oxygen sensor.

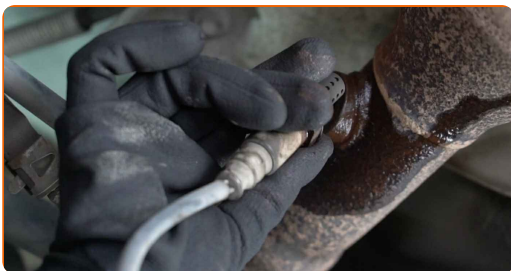

7

Cut the thread for the new oxygen sensor. Use a thread tap. Use a ratchet wrench.



8

Treat the oxygen sensor. Use high-temperature ceramic grease.

9 Install the new oxygen sensor.



10 Tighten the oxygen sensor fastener. Use a combination spanner #22. Use a torque wrench. Tighten it to 41 Nm torque.



11 Treat the oxygen sensor connector. Use dielectric grease.



12 Attach the oxygen sensor connector.



13 Lower the car.

14 Switch on the ignition. This is necessary in order to make sure that the component operates properly.

15

Switch off the ignition.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

LAMBDA SENSOR: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.