# AUTODOC CLUB

How to change spark plugs on **TOYOTA PRIUS** (\_W5\_) – replacement guide



### SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

## (i) Important!

This replacement procedure can be used for: TOYOTA PRIUS (\_W5\_) 1.8 Hybrid (ZVW5\_), TOYOTA PRIUS (\_W5\_) 1.8 Hybrid

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: TOYOTA RAV 4 III (ACA3\_, ACE\_, ALA3\_, GSA3\_, ZSA3\_) 2.4 (ACA33)

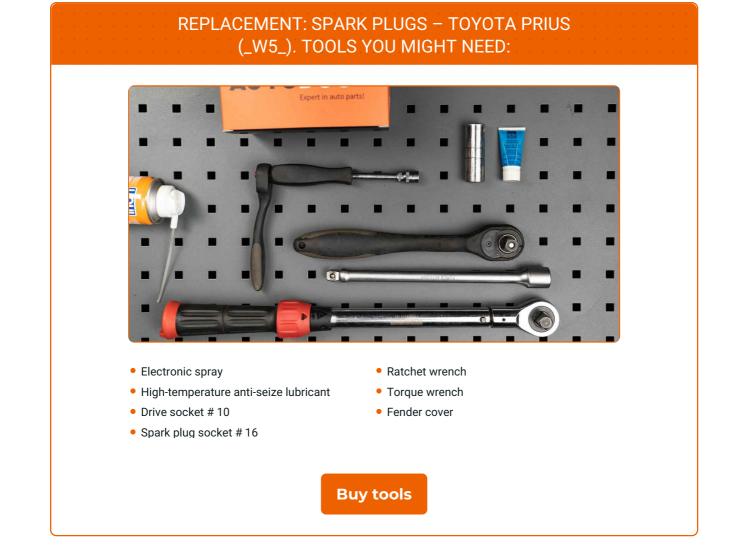

-

Ø



Replacement: spark plugs – TOYOTA PRIUS (\_W5\_). Tip from AUTODOC:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

# **REPLACEMENT: SPARK PLUGS – TOYOTA PRIUS (\_W5\_). TAKE THE FOLLOWING STEPS:**

1

Open the hood.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Unscrew the engine cover fastener. Use a drive socket #10. Use a ratchet wrench.



4

Remove the engine cover.



# + AUTODOC CLUB



5

Unplug the connectors from the ignition coils.



6

Unscrew the ignition coil bracket. Use a drive socket #10.



7

Remove the fastening bolts.



8

Take out the ignition coil from the spark plug well.



### Replacement: spark plugs – TOYOTA PRIUS (\_W5\_). Tip:

• Remember the sequence of steps for ignition coil demounting.

# + AUTODOC CLUB



9

Clean dirt, dust and debris from inside the spark plug wells.



10

Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.



11

Take out the spark plugs.



12

Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs. Treat the surface of the terminals of the new spark plugs. Use high-temperature grease.





13

Install the new spark plugs into their mounting seats.



14

Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 25 nm torque.



# Replacement: spark plugs – TOYOTA PRIUS (\_W5\_). Tip from AUTODOC experts:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

15

Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.





#### AUTODOC recommends:

• Replacement: spark plugs – TOYOTA PRIUS (\_W5\_). Follow the installation steps.

16

Install the fastening bolts.



17

Tighten the fasteners of the ignition coils. Use a drive socket #10. Use a torque wrench. Tighten it to 8 nm torque.



18

Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.





19

Plug in the connectors of the ignition coils. Make sure you hear a click indicating that it is locked in place.



20

Install the engine cover and secure it.



21


Screw in the engine cover fasteners. Use a drive socket #10. Use a ratchet wrench.



#### AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Replacement: spark plugs TOYOTA PRIUS (\_W5\_). Do not use excessive force during installation. This may damage the fasteners.



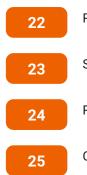

Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

Shut off the engine.




Close the hood.



**VIEW MORE TUTORIALS** 



### AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

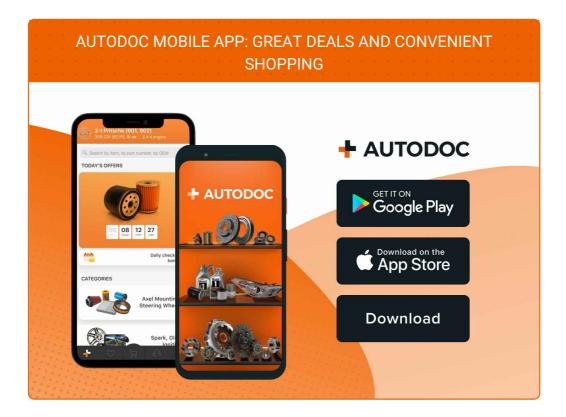

### A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

### SPARK PLUGS: A WIDE SELECTION

# **i** DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.