- AUTODOC CLUB

How to change spark plugs on **VOLVO V70 I** (875, 876) – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: VOLVO V70 I (875, 876) 2.4 Turbo, VOLVO V70 I (875, 876) 2.4 Turbo AWD, VOLVO V70 I (875, 876) 2.3 T-5, VOLVO V70 I (875, 876) 2.0 Turbo, VOLVO V70 I (875, 876) 2.3 Turbo, VOLVO V70 I (875, 876) 2.0, VOLVO V70 I (875, 876) 2.0 Turbo AWD, VOLVO V70 I (875, 876) 2.3 T-5 AWD, VOLVO V70 I (875, 876) 2.3 T AWD, VOLVO V70 I (875, 876) 2.3 AWD

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VOLVO V70 II (285) 2.0 T



REPLACEMENT: SPARK PLUGS – VOLVO V70 I (875, 876). TOOLS YOU NEED:



- Electronic spray
- High-temperature anti-seize lubricant
- Drive socket # 7
- Drive socket # 10
- Torx bit T20
- Spark plug socket # 16

- Ratchet wrench
- Torque wrench
- Flat screwdriver
- Microfibre towel
- Fender cover





Replacement: spark plugs - VOLVO V70 I (875, 876). AUTODOC recommends:

- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS - VOLVO V70 I (875, 876). RECOMMENDED SEQUENCE OF STEPS:

1 2 3

Open the hood.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

Unscrew the engine cover fastener. Use Torx T20. Use a ratchet wrench.



4

Remove the engine cover.



Replacement: spark plugs - VOLVO V70 I (875, 876). Tip:

• Raise the engine cover, holding it on two sides simultaneously.

+ AUTODOC CLUB



5

Unplug the connectors from the ignition coils.



6

Disconnect the air intake pipe fastening. Use a drive socket #10. Use a ratchet wrench.



7

Detach the air intake hose clamp. Use a drive socket #7. Use a ratchet wrench.



8

Remove the air intake pipe.





9

Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



10

Unscrew the ignition coil bracket. Use a drive socket #10.



11

Take out the ignition coil from the spark plug well.



Replacement: spark plugs – VOLVO V70 I (875, 876). AUTODOC experts recommend:

• Remember the sequence of steps for ignition coil demounting.



Clean dirt, dust and debris from inside the spark plug wells.





13

Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.



14

Take out the spark plugs.



15

Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs. Treat the surface of the terminals of the new spark plugs. Use high-temperature grease.



16

Install the new spark plugs into their mounting seats.





17

Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 27 nm torque.



Replacement: spark plugs – VOLVO V70 I (875, 876). Tip from AUTODOC experts:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.

18

Treat the ignition coil tips. Use high-temperature grease. Use a flat screwdriver.



19

Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.





Replacement: spark plugs - VOLVO V70 I (875, 876). Tip from AUTODOC:

- Follow the installation sequence.
- 20

Tighten the fasteners of the ignition coils. Use a drive socket #10. Use a torque wrench. Tighten it to 8 nm torque.



- 21
- Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



- 22
- Plug in the connectors of the ignition coils. Make sure you hear a click indicating that it is locked in place.



+ AUTODOC CLUB



23

Remove the microfibre towel from the air intake hose.



24

Install the air intake pipe and secure it.



25

Fasten the clamp on the air intake hose. Use a drive socket #7. Use a ratchet wrench.



26

Screw in the fastener of the air intake pipe. Use a drive socket #10. Use a ratchet wrench.




27

Install the engine cover and secure it.





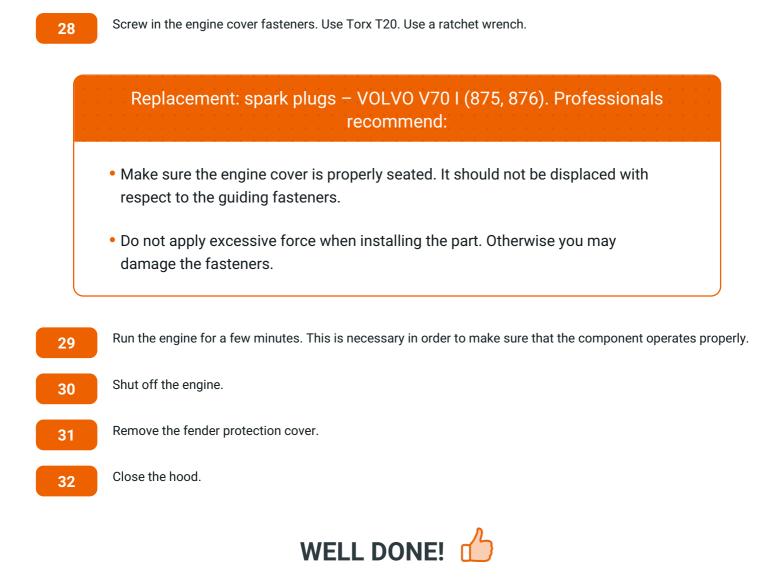

VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.